# **LEDAR–40L** Industrial Lighting Armature

# Technical Catalouge



## Description


LEDAR-40L Industrial etange led lighting armatures are designed for industrial plants, electric power distribution /transformer substations and anywhere requiring uninterrupted lighting.

## Features


- Can be powered from backup supply
- Low Power Consumption
- 40 5630 Led
- Easy Mounting


## **Operating Principles and Technical Characteristics**

LEDAR-40L industrial lighting armatures can bepower from two supplies; grid and backup supply. When grid power is available, power is drawn from grid, on the other hand if there is power outage, power is drawn from backup supply.

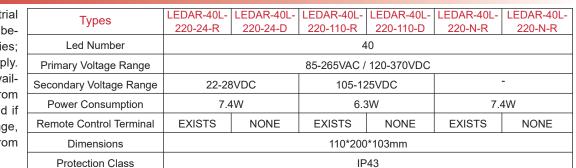


#### Dimensions

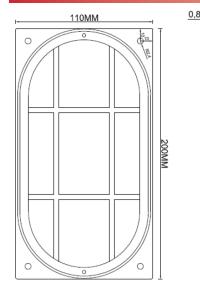

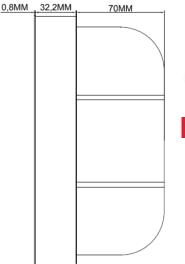

# Part Numbering

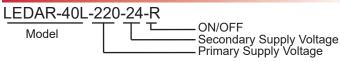

Model LEDAR-40L Primary Supply Voltage 220 – 220VAC

# Secondar Supply Voltage

110 - 110VDC 24 - 24VDC N – None **ON/OFF** R - Remote Control Terminal D – Direct

#### Warranty Terms and Conditions

Elektrolojik Energy Tech. Ltd. Co. warrants a trouble free operation of the LEDAR-40L device within 24 months from the date of sale, on condition that following terms are provided: • the proper connection and operation 25 - 5<sup>3</sup>

## **Safety Precautions**

1.Installation and connections should be done by qualified technical staff.

2.Do not work with live cables.

3.Connect suitable supply to the terminals as indicated in the label.

#### Installation and Operation

1.Armature can be mounted on the surface, in parallel or inclined way.

2.If it will be connected parallel then additional mounting apparatus are not needed. The armature is mounted to the surface from the mounting holes with four suitable screws. If inclined mounting will be done then firstly, additional mounting apparatus should be mounted to the armature plate. Secondly, from the two additional pieces mounting holes, the armature should be mounted to the surface.

3. The armature connections should be done according to the values and order given in table1.

4. After connections have been done, energize the armature.

5. Leds will light when the remote terminal switch is ON. For models without the remote terminal output, the leds will directly light.

Table 1- Terminals		
Symbol	Terminal	Description
Р	Primary Supply	220VAC
N		
+	Secondary Supply	24VDC (110VDC)
-		
	Remote Control Terminals	Switches on short circuit

 the integrity of case, no trace of opening, cracks, spalls etc.
The warranty shall not apply to malfunctions or damages resulting from accidents or user supplied faults.

Elektrolojik Energy Technologies Engineering, Industry and Trading Ltd. Co. Gersan Sanayi Sitesi, 2308 Sok. No: 29 06370 Batıkent/Yenimahalle/ANKARA Tel: +9 (0) 312 278 38 76 - Fax: +9 (0) 312 278 24 13 E-mail: info@elektrolojik.com.tr - Web: www.elektrolojik.com.tr

**Revision 2.0**